

SPACEKEY

MILK FROTHER

USER MANUAL



WWW.SPACEKEYSHOP.COM

CONTENTS

CUSTOMER SERVICE	01
IMPORTANT SAFEGUARDS	02
SAFETY PRECAUTIONS	04
PRODUCT OVERVIEW	05
OPERATING INSTRUCTIONS	06
TECHNICAL PARAMETERS	10
CLEANING AND MAINTENANCE	11
WARRANTY	12

01 CUSTOMER SERVICE

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.



Please scan QR-code to start chatting instantly:



Scan QR-code & Start Chatting



1-866-668-5801



support@spacekeyshop.com



www.spacekeyshop.com

Please read the following instructions carefully before using the SPACEKEY milk frother for the first time and keep it for future reference.

Basic safety precautions should always be followed.

1. Do not touch the product if your hands are moist or wet.
2. To reduce the risk of electrical shock, do not immerse the cord, plug, or other parts of the appliance in water or other liquids.
3. Close supervision is necessary when the appliance is in use. Keep the appliance away from children.
4. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool down before cleaning.
5. Do not operate the appliance when the power cord or plug is damaged. If the appliance malfunctions, dropped, or damaged in any manner, contact SPACEKEY customer service.
6. Unauthorized use or the use of attachments that do not belong to this product may cause fire, electrical shock or personal injury, or damage to your appliance.
7. This appliance is intended for household use only.

03 IMPORTANT SAFEGUARDS

 
8. Do not let the power cord hang over the edge of a table or counter, or touch any hot surface.
9. Do not place the appliance near a gas outlet, electric burner, or heated oven.
10. Do not operate the unit without liquid.
11. Always operate the appliance with the lid in place.
12. Some parts of the unit are hot when the appliance is in use. Please use the handle to move or carry the jug housing.
13. Ensure the milk frother is operated on a clean, stable, and level surface. Do not operate on a sink, draining board, or polished wooden surfaces.
14. Never leave unattended.
15. Do not operate the product if there is no liquid inside.
16. Do not touch whisk for frothing when the appliance is in use.

SAFETY PRECAUTIONS 04

Carefully open the packaging and save all the packaging materials inside. Take out the milk frother and connect it to the power supply. Check if the milk frother operates normally and the accessories are complete.



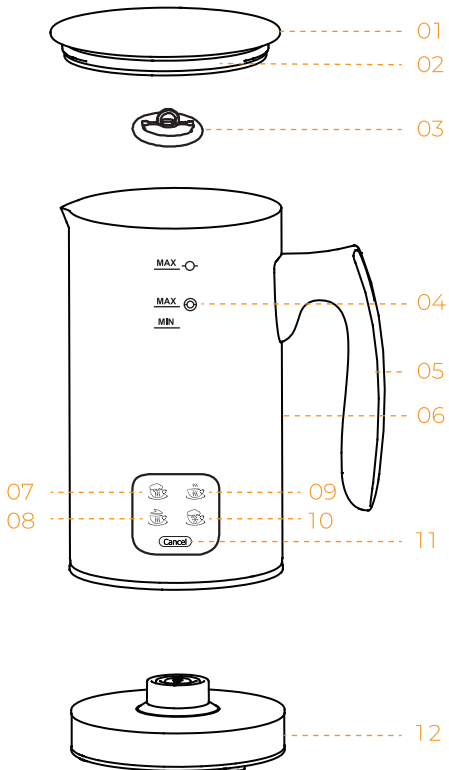

Before using the accessories for the first time, clean them and remove any dust or residues left over from the manufacturing process as stated in the tool cleaning and maintenance section.

05 PRODUCT OVERVIEW

 


01	Lid
02	Silicone ring
03	Whisk for frothing
04	MAX/MIN capacity mark
05	Handle
06	Jug housing
07	Hot dense foam mode
08	Hot airy foam mode
09	Heating milk mode
10	Cold milk froth mode
11	Cancel button
12	Power base

 
OPERATING INSTRUCTIONS 06

Mixer	Function	Rotational Speed	Time to Completion
	Hot Airy Foam	1700~2900r/min	130-160s
	Hot Dense Foam	3000~4200r/min	130-160s
	Heating Milk	400~850r/min	180-240s
	Cold Milk Froth	3000~4200r/min	100-120s

1.

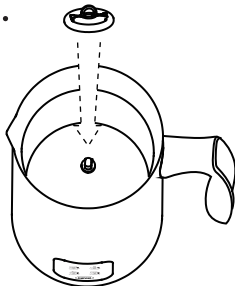 


2.

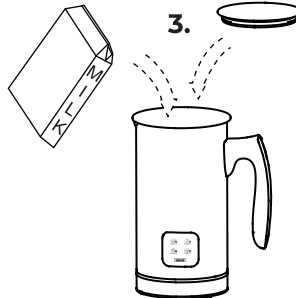

3.

4.

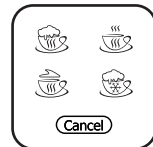 


07 OPERATING INSTRUCTIONS


NOTE:

It is recommended to use whole milk, as it will be easier to form a delicate and dense milk froth.


1. Insert whisk up to the top on the drive shaft inside the canister.
2. Take the canister off the base and pour milk up to the min marking inside the canister, the volume of the milk increases during the frothing process. Only pour milk up to the lower Max marking in order to prevent the milk froth from overflowing.
3. Place the lid onto the canister.
4. Place the canister onto the base.

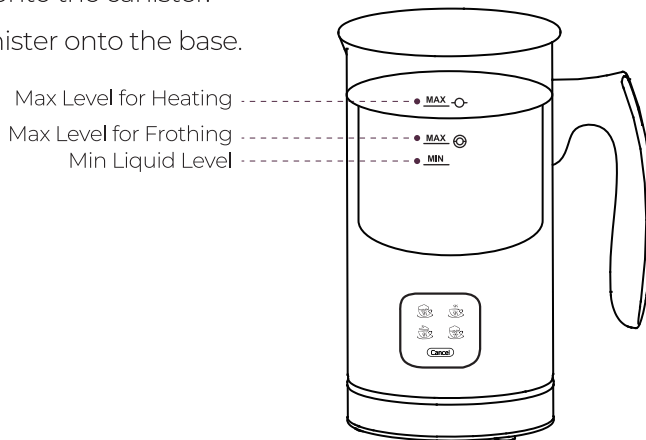


HOT AIRY FOAM

Press "  " button, the orange indicator lights up for 130-160 seconds showing that the unit is in operation. You'll hear three prompt tones after the cycle has finished. The milk frother switches off automatically.

HOT DENSE FOAM


Press "  " button, the orange indicator lights up for 130-160 seconds showing that the unit is in operation. You'll hear three prompt tones after the cycle has finished. The milk frother switches off automatically.

HEATING MILK

Press "  " button, the orange indicator lights up for 180-240 seconds showing that the unit is in operation. You'll hear three prompt tones after the cycle has finished. The milk frother switches off automatically.

09 OPERATING INSTRUCTIONS

COLD MILK FROTHER

Press "  " button, the blue indicator lights up for 100-120 seconds showing that the unit is in operation. You'll hear three prompt tones after the cycle has finished. The milk frother switches off automatically.

NOTE

(In the process of using the product, sometimes there will be light flashing and accompanied by the sound of the situation, the cause of the problem may be due to the milk temperature is too high or not put into the milk caused. In this case, disconnect the power supply and start the milk foam machine again after 5 minutes)

TECHNICAL PARAMETERS 10

Product name	Milk frother
Product model	HQN1-300C
Rated voltage	120V
Rated frequency	60Hz
Rated power	300W
Max Level for Heating	300ml
Max Level for Frothing	140ml
Min Liquid Level	70ml
Dimensions	110*150*200mm

11 CLEANING AND MAINTENANCE

- Clean the appliance and parts thoroughly after each use. Always remove the plug from wall socket before cleaning.
 - Please separate the cup body from the power supply base before cleaning
 - Remove the jug from the power base.
 - Remove the lid, remove the whisk for frother from the jug's shaft at the bottom.
- Never put the appliance in the dishwasher or submerge it in water.

Ensure that the electrical connections do not get wet.

Using a soft, lint-free cloth soaked in cold mild detergent, gently remove the dirt from inside the cup. Clean the inside of the jug with a damp cloth. Dry thoroughly after cleaning.


Exterior: Gently wipe the cylindrical hardware parts outside the cup body with a soft wet towel, it is not recommended to clean the cup body with strong cleaning agent, acid liquid, hard nylon brush or metal brush lest any scratches are left on the surface of the cup body.

- SPACEKEY-branded products are covered by the SPACEKEY 12-month warranty from the original date of purchase. If you want to extend your warranty for one more year, please do not hesitate to contact us.
- Become a SPACEKEY member and get access to exclusive benefits, such as updates about the latest SPACEKEY products.

REGISTER ONLINE NOW!

warranty.spacekeyshop.com



 1-866-668-5801

 support@spacekeyshop.com

 www.spacekeyshop.com

SPACEKEY



Intertek
5021813



Made in China