


Quick Setup Guide

! IMPORTANT: The default Master Code is **123456**. It is required that you change it to your own before programming.

Change Master Code	Press SET Flashing green light	Master Code +  Flashing green light	Press 4 +  Flashing green light	New Master Code +  Flashing green light	Re-enter New Master Code +  Success Flashing green light	
Add User Code	Press SET Flashing green light	Master Code +  Flashing green light	Press 1 +  Flashing green light	User ID (2-digit) +  Flashing green light	New User Code +  Flashing green light	Re-enter User Code +  Success Flashing green light
Delete User Code	Press SET Flashing green light	Master Code +  Flashing green light	Press 2 +  Flashing green light	User ID (2-digit) +  Flashing green light	Re-enter User ID +  Success Flashing green light	
Delete All User Codes	Press SET Flashing green light	Master Code +  Flashing green light	Press 3 +  Flashing green light	Master Code +  Success Flashing green light		
Set Auto Lock	Press SET Flashing green light	Master Code +  Flashing green light	Press 5 +  Flashing green light	Time (5-30 s) +  Success Flashing green light		
Cancel Auto Lock	Press SET Flashing green light	Master Code +  Flashing green light	Press 5 +  Flashing green light	0 0 +  Success Flashing green light		
Sound On or Off	Press SET Flashing green light	Master Code +  Flashing green light	Press 6 +  Flashing green light	1 or 2 +  (1=Sound Off) (2=Sound On)		



Notes:

1. If the indicator light flashes red, it means your setting failed. To continue your programming, press **SET** to re-enter programming mode.
2. The **SET** button is inside the battery compartment.
3. When you enter a wrong button, you can press  to clear it.