

BAOSHISHAN

Manual Meat Slicer

Handling Instructions





Contact us:

Amazon shop: Boshi Electronic Instrument

Email: Alismile2014@hotmail.com (Reply within 24 hours)

Whatsapp/ WeChat : 8615168349452

BAOSHISHAN Manual Meat Slicer is suitable for a variety of household or commercial occasions. It can process many frozen meat, Chinese herbal medicine, nougat, hard fruits and vegetables, etc.

Please Note when you want to unload the blade, be careful with the knife edge. It is very sharp.

1. Product Introduction



Model: GZM-3120
Net Weight: 2.6kg
Blade Length: 200mm
Slicing Speed: 60 pieces/min
Slice Thickness: 0.3-15mm
Dimension: 380*150*120mm
Features: Adjustable Chassis
Application: Frozen Meat
 Hard Fruit Vegetables

Attachment

Stainless Steel Blade



Model: ZB-208B
Net Weight: 2.5kg
Blade Length: 200mm
Slice Thickness: 0.5-25mm
Dimension: 460*230*110mm
Features: Meat Freeze-proofing
Application: Frozen Meat



10 Frozen Meat Bags
Frozen into cylindrical meat rolls



Meat Cover
Freeze-proofing



Knife Sharpener



Stainless Steel Blade



Wrench

Attachment



Model: ZB-208C
Net weight: 2.4kg
Blade length: 200mm
Slice Thickness: 0.2-25mm
Dimension: 440 * 220 * 105mm
Features: Spring Feeding Design
Application: Frozen Meat

Attachment



10 Frozen Meat Bags
 Frozen into cylindrical meat rolls

Knife Sharpener



Stainless Steel Blade



Wrench



Model: ST-500
Net Weight: 4.2kg
Blade Length: 200mm
Slice Thickness: 0.2-30mm
Dimension: 500* 225 * 125mm
Features: Thickened Blade
Application: Chicken Duck with Bone



10 Frozen Meat Bags
 Frozen into cylindrical meat rolls

Knife Sharpener



Stainless Steel Blade



Wrench



Attachment

2. Operation Instructions


① Put the meat slicer on the kitchen counter top or solid table, firmly hold the slicer leg on the table/counter top, put the prepared frozen meat roll on the holder.

② Left hand (suggest wear protection glove) firmly hold the meat holder and press the frozen meat close to the blade, right hand press the handle to cut meat to thin piece. After one cut, rise the handler, push the meat roll to right and do another one. **DO NOT PUT FINGERS UNDER BLADE**

3. Matters Needing Attention

Q1: What if you want to cut food that is much longer than the size of the cutter?

A1: You can unscrew the four knobs to take off the two baffles.

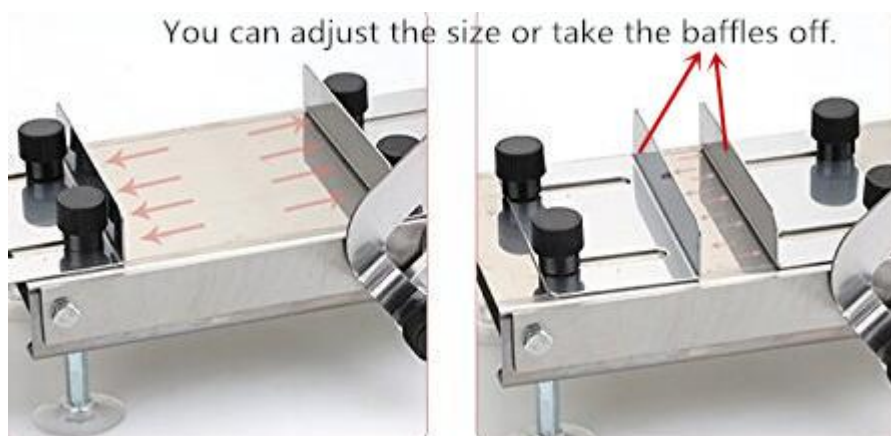

Q2: How to maintain?

A2: 1. After use, please wash through all parts which been touched with meat or hand. Do not machine wash the slicer body. And please use paper

towel to absorb all water around the slicer handler immediately after cleaning. Suggest to drip some cooking oil on screw and blade after cleaning.

2. Store in dry condition and keep the blade out of handler if not use

3. Blade Sharpen Unscrew the blade from handler and use any regular blade sharpener to sharp the blade. Suggest sharp it each time if heavy use.

Q3: How to adjust the thickness of each slice?

Q3: You can first rotate the inner knob. Then rotate outer knob the same circle as the inner circle. Otherwise, the thickness of each slice will be uneven.

If you want the thickness to be thinner, please rotate it in clockwise.

Please refer to the Picture 1.

If you want the thickness to be wider, please rotate it in counterclockwise.









Please refer to the Picture 2.



picture 1



picture 2

Model	ST-300	ST-200	ST-200B	ST-700
				
Net weight	7.4kg	3kg	3.5kg	25kg
Slice thickness	0.2-20mm	0.2-10mm	0.2-30mm	/
Dimension (mm)	610*270*180	500 * 195 * 155	500 * 240 * 155	680*310*480
Blade length	300mm	200mm	200mm	350mm
Application	Frozen Meat	Frozen Meat	Frozen Meat	Rib Cylinder Bone
ASIN	B07ZK9779F	B07ZK87RP	B07ZKGFZ7P	B0813GR9TN
Model	ST-308B	ST-500B	ST-100C	ST-700C
				
Net weight	7.75kg	4.2kg	4kg	22kg
Slice thickness	0.2-30mm	0.2-30mm	0.2-9mm	/
Dimension (mm)	610*270*180	500 * 225 * 125	500 * 290 * 125	680*340*370
Blade length	350mm	200mm	200mm	350mm
Application	Chicken Duck	Chicken Duck	Herbs Ginseng	Rib Cylinder Bone
ASIN	B078GHPJB3	B07ZYZNMBD	B07ZVT4HM6	B0813H84L6

*** How to Buy them * Just Search the ASIN on Amazon**

